



MAINTENANCE

Inspect and test your light and bracket apparatus before every ride.

Keep your light clean and free of dirt, be careful when cleaning any mud or dirt from lens to avoid scratching.

Never use a high pressure spray or hose on your light.

Do not use harsh abrasive or corrosive materials to clean your light.

For extended periods when your light is not in use fully recharge the light once a month, as a long duration with no charge is detrimental to the cells.

WARNING

 Exposure Lights are very powerful lighting systems, please take care when operating. Do not look directly into the light or shine directly at others, including other road users.

Exposure Lights / Ultimate Sports Engineering Ltd. accept no liability for any injuries or other damages arising from the use of their product in any circumstances.

NOTE: Patents apply.



WARRANTY & SERVICE - LIGHT FOR LIFE



Please do not send any products back to us without contacting our service team first to discuss your issue and for a valid returns number.

All our lights come with a 2 year warranty.

If you have a servicing or technical question you can contact us using the information below. If you return your light for repair, no work will be carried out until you have been contacted with the cost for the repair. If you are outside of the UK it would be quicker in the first instance to contact your local distributor.

+44 (0)1798 839300

service@use.group

Ultimate Sports Engineering Ltd
Unit 4 Bury Mill Farm
Bury
West Sussex
RH20 1NN
United Kingdom

#ownthenight

For more information please visit:
exposurelights.com

MADE IN
GREAT BRITAIN



EXPUG2.3





USER GUIDE

BLAZE • BLAZE ReAKT

CHARGING

Fully Charge your light **before** first use.

Locate the charge port on top of the light by lifting the silicone top cap.


Fully insert the USB Top-Up Cable and begin charging from a USB supply.

An LED behind the Function Button will flash green to indicate that it is charging and then turn solid green when the light is 95% charged, the remaining 5% is a trickle charge.

Approximate charge time from a 500 mA supply is 4 hours.

NOTE: For the **Blaze** this will require the **1.5Ah Smart Charger** (EXPCHARGERSALES) from exposurelights.com

Charge Port

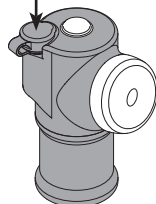

⚠ IMPORTANT: After charging is complete correctly replace the top-cap to prevent water ingress.

LIGHT OPERATION & BATTERY LIFE

To turn the light on press the function button twice in quick succession.

 
The light will turn on in the mode that was last used. A single press of the function button will cycle between a constant beam and a pulse.

To turn the light off hold the function button down until there is a double flash and then release.

The Function Button also displays mode and battery life. When you turn the light on or change to another mode the Function Button will glow amber for Pulse Mode and green for Constant for 2 seconds, thereafter the Function Button becomes the Fuel Gauge and indicates battery life remaining.

NOTE: When the battery has only 5% charge remaining the light will automatically switch to the low flash setting and the Function Button will flash red.

Function Button



Fuel Gauge

LED COLOUR	BATTERY %
GREEN	100 - 50
AMBER	50 - 25
RED	25 - 5
RED FLASH	5 - EMPTY


POWER BANKS

Unfortunately, we cannot guarantee that power banks will work with our lights. If you plan to use one, we recommend using a power bank with a bigger capacity than the light and with the highest output possible, minimum 2A, ideally higher. We also recommend thoroughly testing your power bank with the light before planning any significant rides/events.

The guaranteed way to add runtime is to use one of our Support Cells, which are available at: www.exposure-use.com

SEATPOST MOUNTING

Additional brackets and silicone bands are available from exposurelights.com

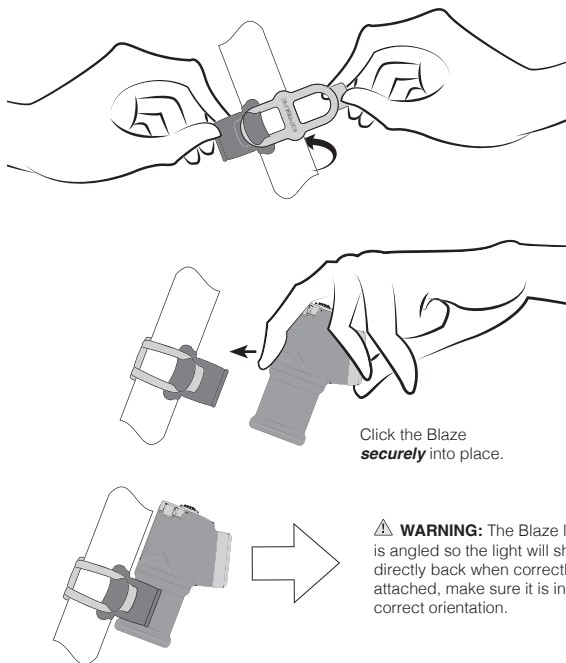

DAYBRIGHT



We recommend using your light in DayBright mode during the day for your safety.

To access DayBright mode you need to be in Program 1 and then select the Flash (FL) setting.

OPTIMISED MODE SELECTOR (OMS)



OMS allows you to select a burn time tailored to your needs, the longer the burn time the lower the lumen output, if you double burn time, you halve lumen output.

OMS BLAZE



There are three programs to choose from that are shown on the light body.

With the light off press and hold the function button, after 2 seconds the light will flash once, twice and then a third time. These flashes correspond to the different programs and you release the function button after the appropriate flash. e.g. to access Program 2 you release the function button after the 2nd flash.

The light will then remain in the selected Program, regardless of being turned off and on, until another Program is selected.

PROGRAM	MODE	
	CONSTANT	FLASH
1 HIGH	6 hrs	12 hrs
2 MEDIUM	12 hrs	24 hrs
3 LOW	24 hrs	48 hrs

An abbreviated version of this table is etched onto the light.

PGM - Program
C - Constant
FI - Flash



PGM	C	FI
1	-	6 12
2	-	12 24
3	-	24 48

ReAKT & PELOTON MODE (BLAZE ReAKT ONLY)



To activate ReAKT you will need to use OMS. Start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 4th flash release the Function Button and ReAKT Technology will be activated and live when the light is turned on.

To activate Peloton Mode, start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 5th flash release the Function Button and Peloton Mode will be activated and live when the light is turned on.

To deactivate ReAKT and Peloton Mode start with the light OFF and hold down the Function Button. After 2 seconds the light will flash regularly, after the 6th flash release the Function Button and the light will be reset. When ReAKT mode is activated, run times may vary.

NOTE: ReAKT and Peloton Mode are an either/or option and can't function simultaneously.