



STAND LIGHT

When Revo stops receiving dynamo power the battery will maintain the low constant output and flashing RedEye (if fitted).

Output will be maintained until the battery is fully depleted or the user turns the Revo off and unplugs the RedEye.